


ES-4000L

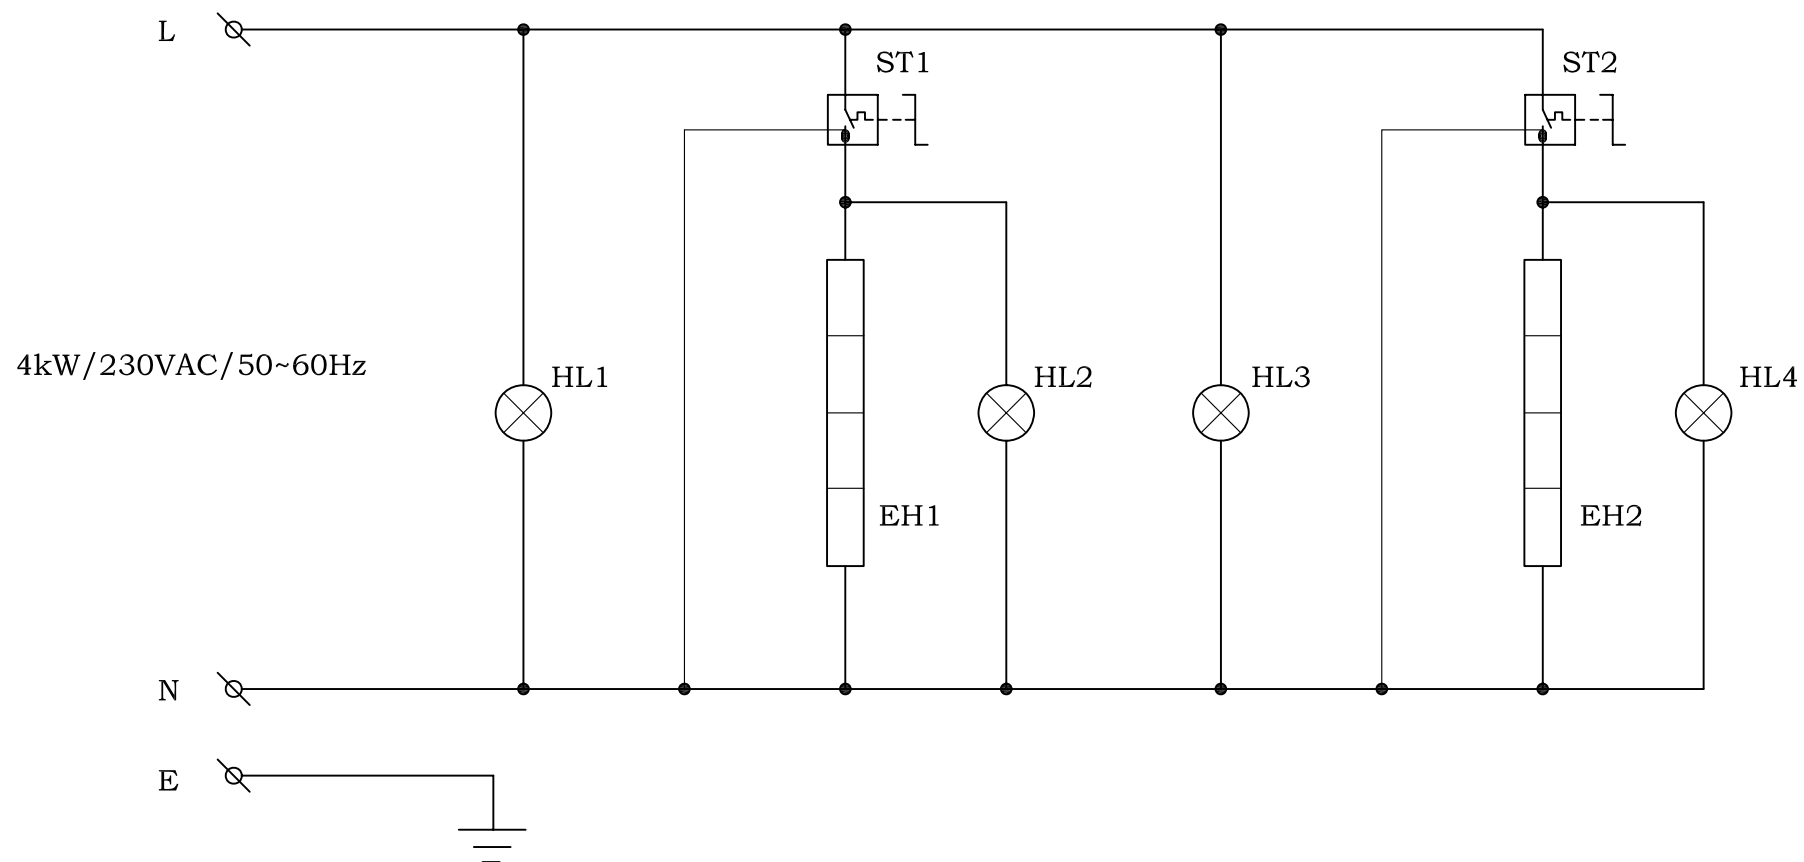

HL1.HL3-----Power indicator
HL2.HL4-----Heating indicator
ST1.ST2-----Proportioner Switch
EH1.EH2-----Heating element